



Quick guide — — Overview buttons and guidance screen

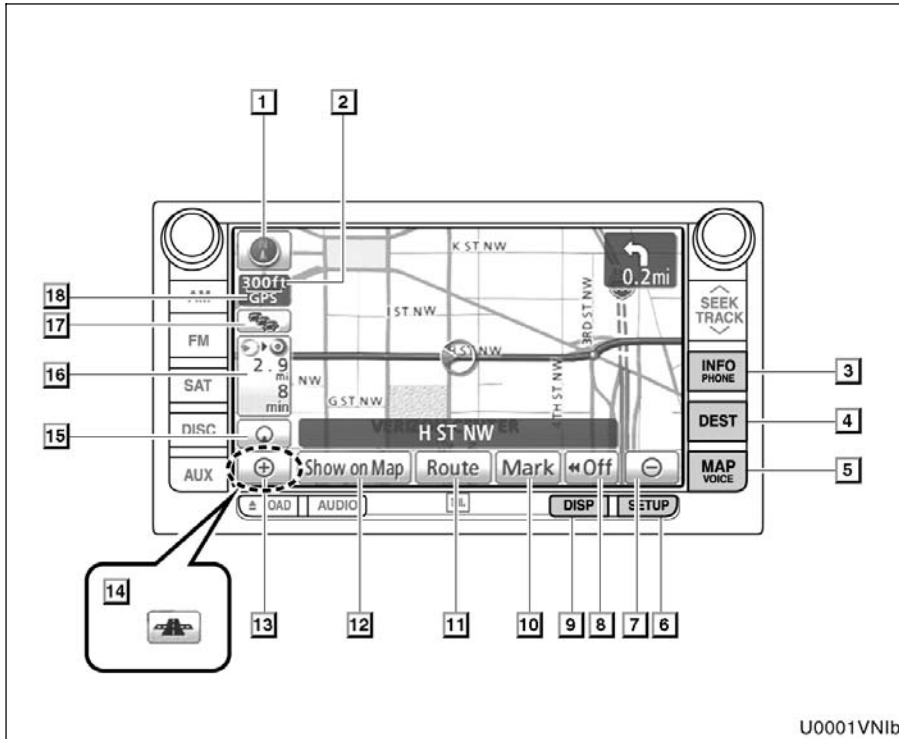


No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	43
2	Scale indicator	This figure indicates the map scale.	42
3	“INFO/PHONE” button	Push this button to display the “Information” screen.	23, 126, 143, 307, 308
4	“DEST” button	Push this button to display the “Destination” screen.	7, 9, 11, 12, 13, 52
5	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	33, 82
6	“SETUP” button	Push this button to display the “Setup” screen.	22, 102, 224, 229, 231, 233, 242, 281, 288

No.	Name	Function	Page
7	Zoom out button	Touch this button to reduce the map scale.	42
8	“◀◀Off”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “On▶▶”.	239
9	“DISP” button	Push this button to display the “Display” screen.	31
10	“Mark”	Touch this button to register the current position or the cursor position as a memory point.	35
11	“Route”	Touch this button to change the route.	84, 86
12	“Show on Map”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	92, 96, 97, 99
13	Zoom in button	Touch this button to magnify the map scale.	42
14	Foot print map button	Touch this button to display the foot print map and the building information.	42
15	Screen configuration button	Touch this button to change the screen mode.	39
16	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	83
17	XM® NavTraffic mark	This mark is displayed when XM® NavTraffic information is received.	98
18	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	296

— Registering home

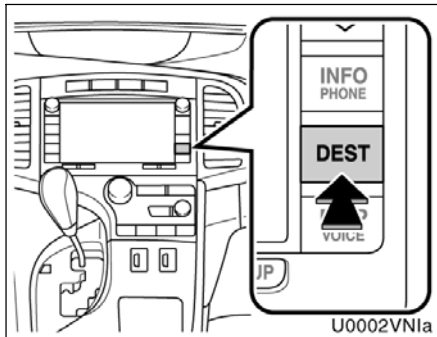

1 Push the “DEST” button.

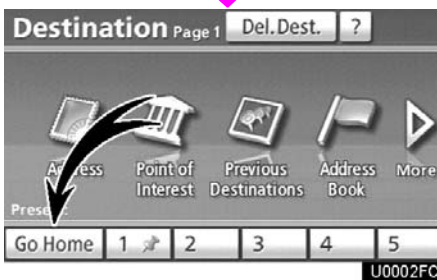

2 Touch “Go Home”.

If home has not been registered, you can register it by touching “Go Home”.



3 Touch “Yes”.




4 There are 4 different methods to search your home.

See “Destination search” on page 52.



5 Touch "Enter".


The "Edit Home" screen is displayed.

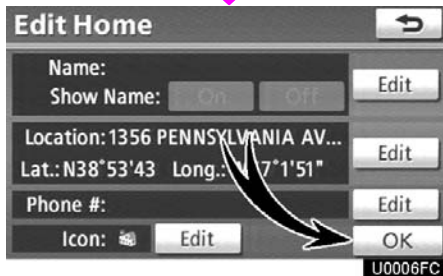

6 Touch "OK".

Registration of home is complete.
 You can also register home by touching the "SETUP" button. (See " (a) Registering home" on page 103.)
 You can change the name, location, phone number and icon. (See " (b) Editing home" on page 104.)

— Registering preset destinations

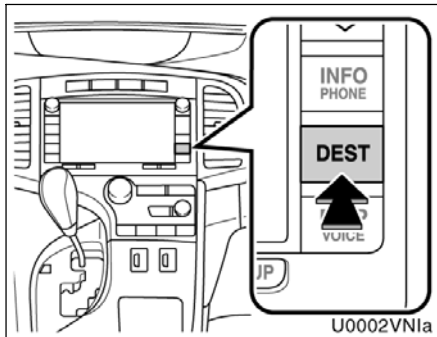

1 Push the “DEST” button.



2 Touch one of the preset destination buttons.

You can set a preset destination to any preset destination button that has not yet been set.



3 Touch “Yes”.




4 There are 4 different methods to search preset destinations.

See “Destination search” on page 52.



5 Touch "Enter".

The "Edit Preset Destination" screen is displayed.

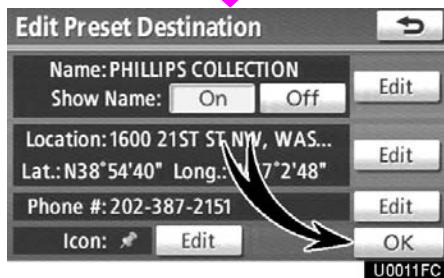

6 Touch "OK".


Registration of preset destinations is complete.

You can also register preset destinations by touching the "SETUP" button. (See " (a) Registering preset destinations" on page 106.)

You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 107.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 54.)

— Operation flow: guiding the route

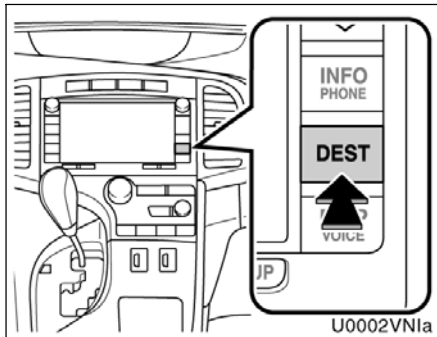

1 Push the “DEST” button.



2 There are 10 different methods to search destinations.

See “Destination search” on page 52.



3 Touch “Go to”.

The navigation system performs a search for the route.




4 Touch “OK”, and start driving.


Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 72.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination

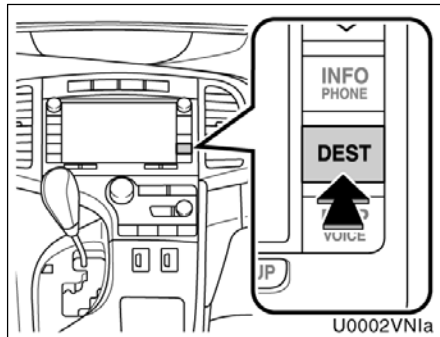


1 Push the “DEST” button.

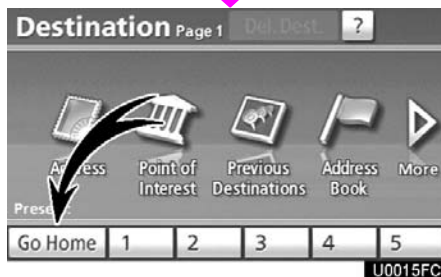

2 Touch “Go Home”.

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 103.)

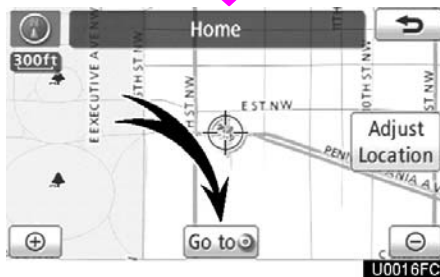

3 Touch “Go to”.

The navigation system performs a search for the route.




4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 72.)

5 Guidance to the destination is given via voice and on the guidance screen.

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “DEST” button.

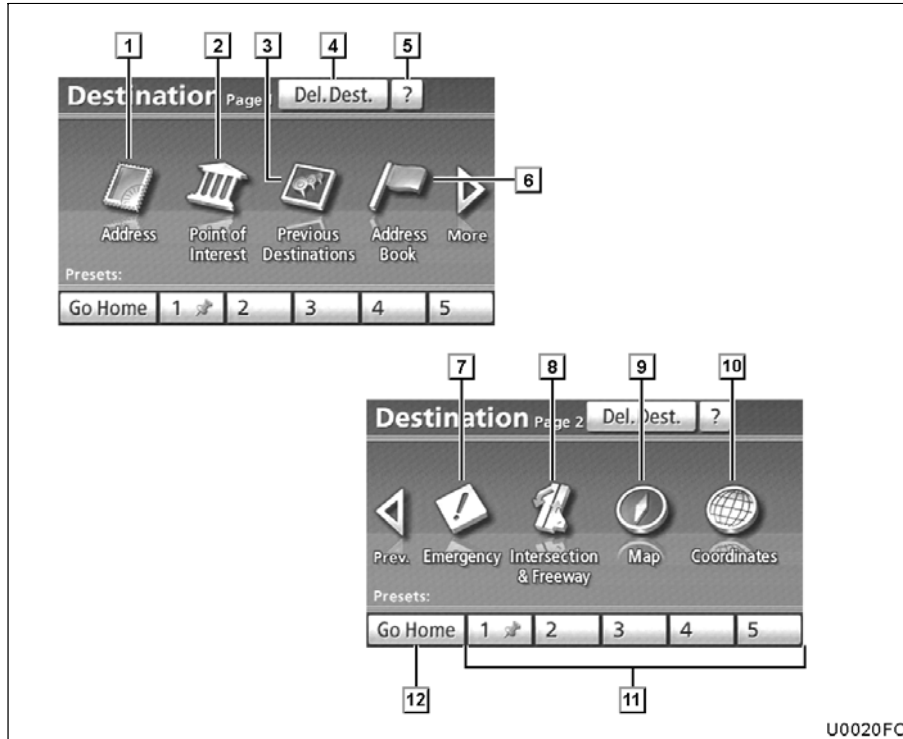

- | | |
|--|--|
| <p>1 “Address”
A house number and the street address can be input by using the input keys. 55</p> <p>2 “Point of Interest”
Select one of the many Points of Interest that have already been stored in the system’s database. 59</p> <p>3 “Previous Destinations”
A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. 65</p> <p>4 “Del. Dest.”
Set destinations can be deleted. 71</p> | <p>5 “?”
Function help for the “Destination” screen can be viewed on this screen. 33</p> <p>6 “Address Book”
The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 109.) 66</p> <p>7 “Emergency”
One of the four categories of emergency service points that are already stored in the system’s database can be selected. 66</p> |
|--|--|

8 “Intersection & Freeway”

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known. 67

9 “Map”

A destination can be selected simply by touching the location on the displayed map. 70

10 “Coordinates”

A destination can be set using latitudes and longitudes as coordinates. 71

11 Preset destination touch screen buttons


One of 5 preset destination points can be selected by touching the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “preset destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 106.) 54

12 “Go Home”

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 103.) 54

Quick reference (“Setup” screen)


The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “SETUP” button.

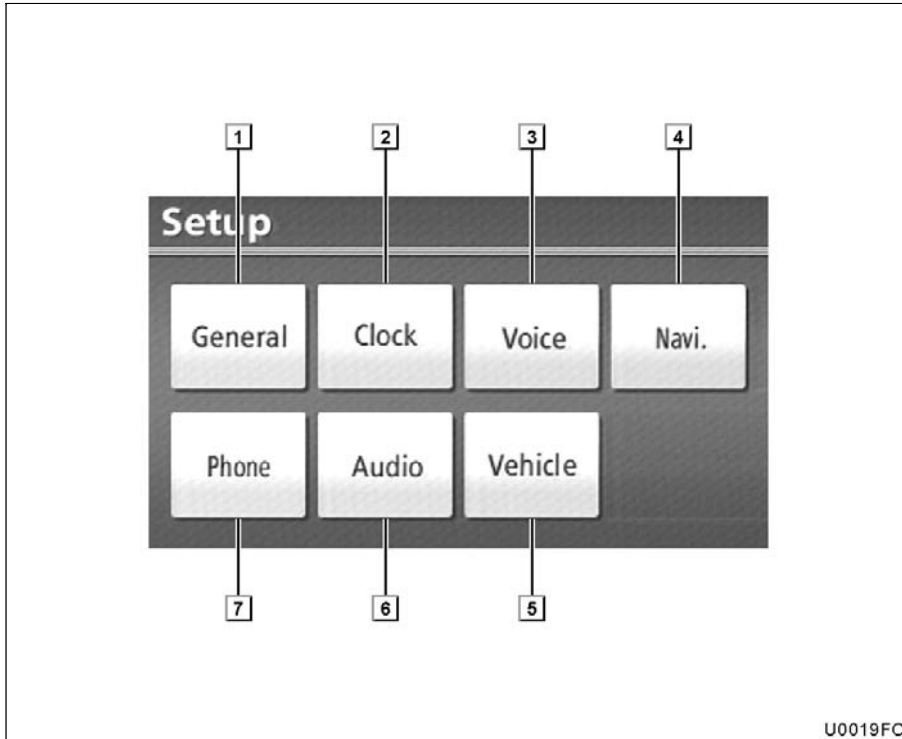

- | | |
|---|--|
| <p>1 “General”
Settings are available for language selection, operation sounds, automatic screen change, etc. 224</p> <p>2 “Clock”
Used for changing settings for time zones, daylight saving time, etc. 229</p> <p>3 “Voice”
Voice guidance can be set. 231</p> <p>4 “Navi.”
Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. 233</p> | <p>5 “Vehicle”
Settings are available for vehicle information such as maintenance information. 288</p> <p>6 “Audio”
Settings are available for portable audio devices, Bluetooth® audio devices etc. 281</p> <p>7 “Phone”
Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. 242</p> |
|---|--|

Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the “INFO/PHONE” button.

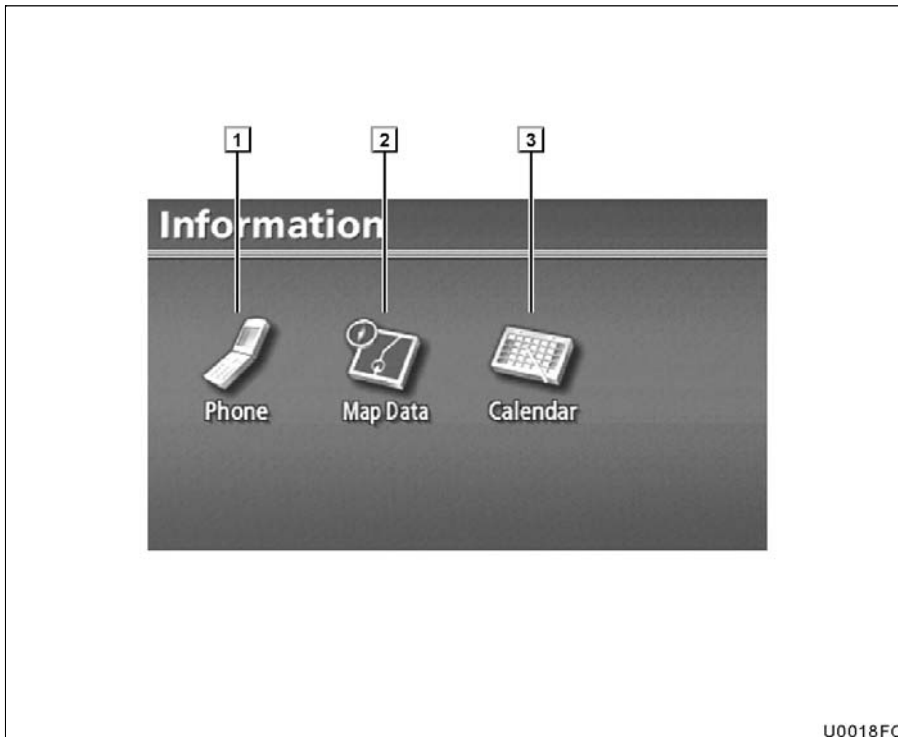

- 1** “Phone”
To view hands free phone information.
..... 126
- 2** “Map Data”
Displays information regarding the map
data disc version or coverage area.
..... 307
- 3** “Calendar”
To view calendar. 143

