


3-5. Using the interior lights


Interior lights list

Your Toyota is equipped with the illuminated entry system to assist in entering the vehicle. Due to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key (vehicles with smart key system), whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode (vehicles with smart key system) or engine switch position (vehicles without smart key system).

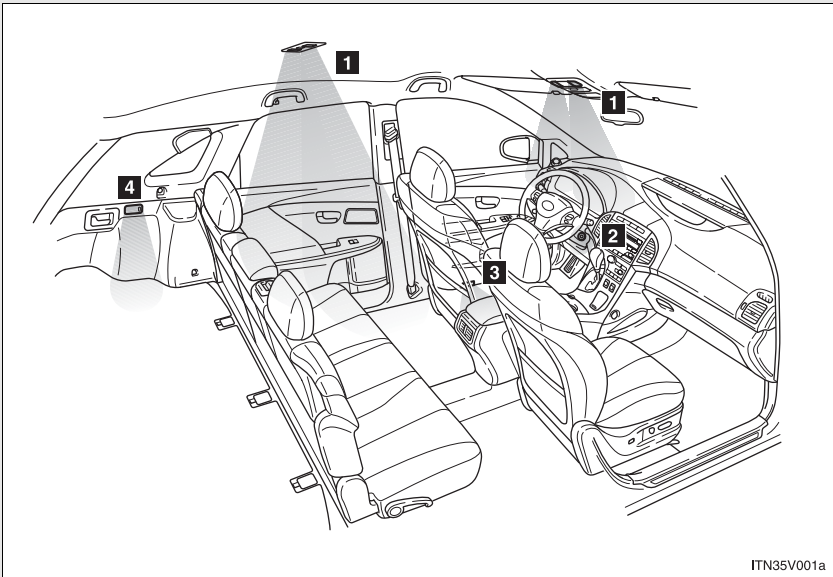

- 1** Personal/interior lights
- 2** “ENGINE START STOP” switch light (vehicles with smart key system) or engine switch light (vehicles without smart key system)
- 3** Door courtesy lights
- 4** Luggage compartment light

Personal/interior light main switch

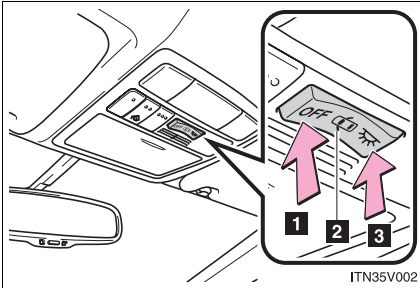

1 “OFF”

The personal/interior lights can be individually turned on or off.

2 Door position


The personal/interior lights come on when a door is opened. They turn off when the doors are closed.

3 On

The personal/interior lights cannot be individually turned off.

Personal/interior lights


► Front

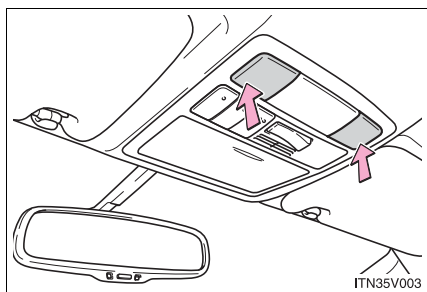

On/off

The illuminated entry system is activated even if the light is turned off when the personal/interior light main switch is in door position.


► Rear

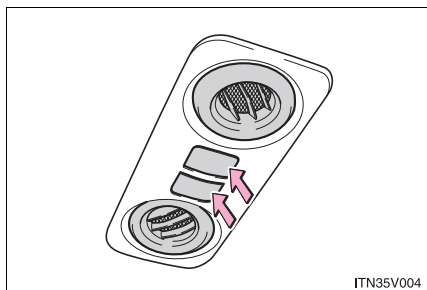

On/off

The illuminated entry system is activated even if the light is turned off when the personal/interior light main switch is in door position.


Luggage compartment light

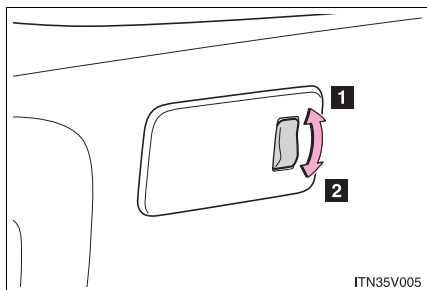

1 Door position

2 Off

n Adjusting the rear personal/interior lights angle

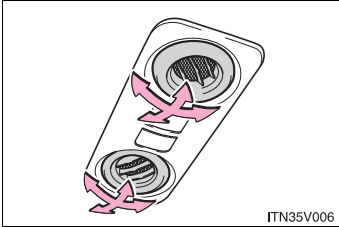

Push the edge of the light lens.

n To prevent the battery from being discharged

▶ Vehicles with smart key system

If the personal/interior lights and “ENGINE START STOP” switch light remain on when the door is not fully closed and the personal/interior light main switch is in door position, the lights will go off automatically after 20 minutes.

▶ Vehicles without smart key system

If the personal/interior lights and engine switch light remain on when the door is not fully closed and the personal/interior light main switch is in door position, the lights will go off automatically after 20 minutes.

n Customization that can be configured at Toyota dealer or by the TFT type multi-information display

Settings (e.g. The time elapsed before lights turn off) can be changed.
(Customizable features →P. 590)