

What to do if...

What to do if...


A tire punctures	P. 529	If you have a flat tire
The engine does not start	P. 101	Engine immobilizer system
	P. 540	If the engine will not start
	P. 548	If the battery is discharged
The shift lever cannot be moved out	P. 543	If the shift lever cannot be shifted from "P"
The engine coolant temperature gauge enters the red zone	P. 553	If your vehicle overheats
Steam can be seen coming from under the hood		
The key is lost	P. 544	If you lose your keys
The battery runs out	P. 548	If the battery is discharged
The doors cannot be locked	P. 53	Side doors
	P. 59	Back door
The horn begins to sound	P. 104	Alarm
The vehicle is stuck in mud or sand	P. 556	If the vehicle becomes stuck

The warning light or indicator light comes on


P. 513

If the warning light turns on or a warning buzzer sounds...


► Instrument cluster

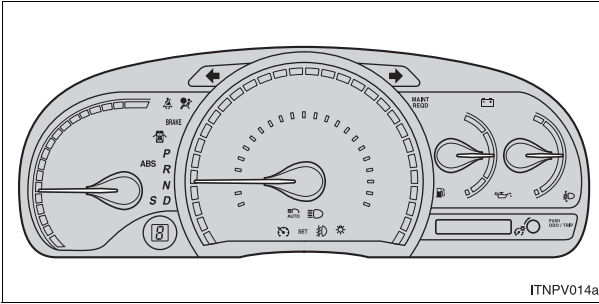

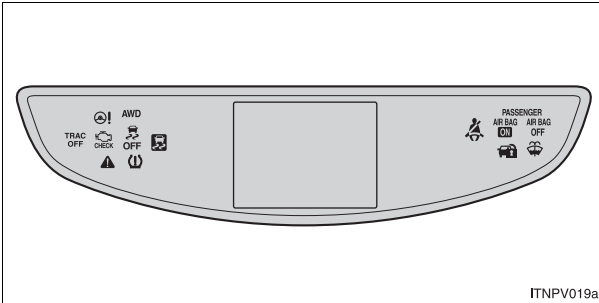

► Center display





n **Warning lights**

	Master warning light P. 516
---	--------------------------------


	Open door warning light P. 516
---	-----------------------------------


	Low engine oil pressure warning light P. 514
---	---

	Tire pressure warning light P. 516
---	---------------------------------------


	Charging system warning light P. 514
---	---

<b>MAINT REQD</b>	Engine oil replacement reminder light P. 516
-------------------	---


	Malfunction indicator lamp P. 514
---	--------------------------------------


	Driver's seat belt reminder light P. 516
---	---


<b>BRAKE</b>	Brake system warning light
or	


	Front passenger's seat belt reminder light P. 516
---	--


	P. 513
---	--------

	Low fuel level warning light P. 516
---	--


	Automatic headlight leveling system warning light P. 514
---	---

	Electric power steering system warning light P. 514
---	--

	SRS warning light P. 515
---	-----------------------------

	Low windshield washer fluid level warning light P. 516
---	---

<b>ABS</b>	ABS warning light
or	

	Smart key system warning light P. 519
--	--

	P. 515
---	--------

<b>AWD</b>	Active torque control 4WD system warning light P. 516
------------	--

The warning message is displayed

P. 528 If a warning message is displayed





