

# Tire Inflation Pressure Compensation and Adjustment

**Service Category** Suspension

**Section** Tire/Wheel

**Market** USA

Toyota Supports  
 ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2004 – 2010	4Runner	
2007 – 2010	Avalon, Camry, Camry HV, RAV4, Sienna	
2008 – 2010	Corolla, FJ Cruiser, Highlander, Highlander HV, Matrix, Yaris	
2006 – 2010	Land Cruiser, Prius, Tacoma	
2005 – 2010	Sequoia, Tundra	
2007 – 2008	Solara	
2009 – 2010	Venza	

### TSB REVISION NOTICE

- **May 15, 2009 Rev1:**
  - **Applicability has been updated to include 2010 model year vehicles, and 2009 – 2010 model year Venza.**
  - **Figure 1 has been updated, and Celsius temperatures have been removed from the bulletin.**

**Any previous printed versions of this service bulletin should be discarded.**

## Introduction

The purpose of this bulletin is to provide a procedure to adjust tire pressure correctly when outside temperature is significantly colder or warmer than shop temperature.

Seasonal temperature change can dramatically alter tire pressure, which can cause the tire pressure warning lamp to illuminate.

## Tire Inflation Pressure Compensation and Adjustment

---

### Introduction (Continued)

**NOTE**

This bulletin applies to some 2004 – 2007 model year Toyota vehicles with direct TPWS and all 2008 and newer model year Toyota vehicles.

### Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

### Tire Pressure vs. Tire Temperature

Tire temperature is dependent on “cold” tire pressure, driving distance and speed, ambient temperature and road surface temperature. As the temperature of the tire changes, air in the tire expands and contracts, changing the tire’s air pressure. The cold tire pressure for all Toyota models will vary and will need to be adjusted accordingly.


“Cold” tire pressure, as shown on the tire pressure label on our vehicles, is generally considered to be the pressure in a tire that has not been driven in the past 4 hours and has been parked outdoors.

The TPWS **MUST** be initialized with the tire pressure marked on the vehicle placard. Tires are then adjusted according to the information in this bulletin to ensure that the TPWS light does not illuminate unnecessarily.

# Tire Inflation Pressure Compensation and Adjustment

## Tire Pressure Adjustment

Figure 1. Tire Pressure Chart

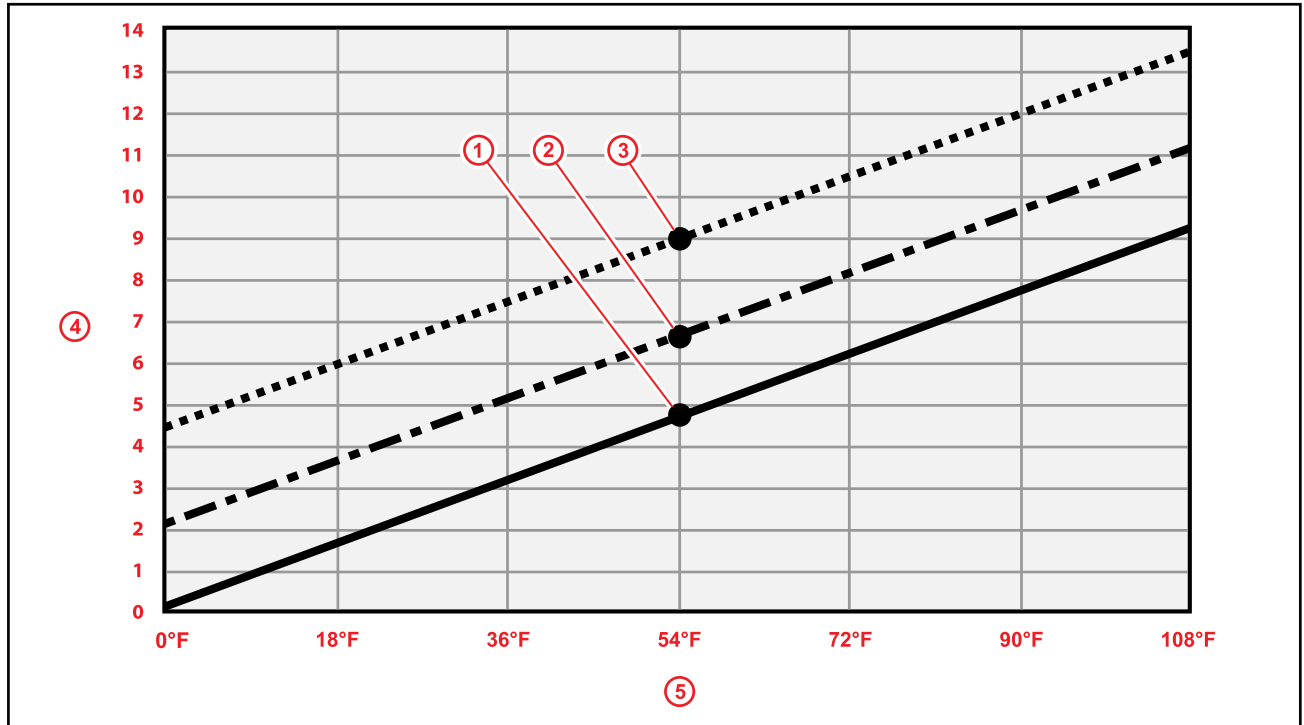

1	———— Example 1: Cold Tires — Car Has Not Been Driven for 4 Hours and Parked Outside
2	- - - - - Example 2: Warm Tires — Car Has Just Been Driven a Short Distance in Traffic
3	..... Example 3: Hot Tires — Car Has Just Been Driven for at Least 1 Hour of Highway Driving
4	Tire Pressure Adjustment (psi)
5	Temperature DIFFERENCE Between Seasonable Lowest Temperature and Workshop Temperature

### Recommended Tire Pressure Adjustment:

**NOTE**  
Use a high quality accurate tire pressure gauge, and check its accuracy regularly.

- Consider the difference of the air temperature in the workshop and the lowest ambient temperature that may be expected in the next few weeks (especially in winter).
- Use the chart (Figure 1) to compensate for temperature of the tires when adjusting tire pressure.
- Use temperature compensation Example 1 for the spare tire.

### Example 1: Temperature Compensation – “Cold” Tires

- The vehicle has been parked overnight outside shop (vehicle has “cold” tires) and tire pressures are set to 31.9 psi.

## Tire Inflation Pressure Compensation and Adjustment

---

### Example 1: Temperature Compensation – “Cold” Tires (Continued)

- Workshop temperature is 68°F, and expected lowest ambient temperature in the local area is to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the tire pressure chart (Figure 1), find the intersection of the cold tire line at the point corresponding to 54°F, and read off the value on the tire pressure change axis. In this case it would be about 4.9 psi.
- The tires should be filled to:  
**31.9 + 4.9 psi = 36.8 psi**

### Example 2: Temperature Compensation – “Warm” Tires

- The vehicle has been driven to the shop on surface streets for about 30 minutes (vehicle has “warm” tires) and tire pressures are set to 31.9 psi.
- Workshop temperature is 68°F and expected lowest ambient temperature in your area is to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the Tire Pressure Chart (Figure 1), find the intersection of the warm tire line at the point corresponding to 54°F and read off the value on the tire pressure change axis. In this case it would be about 6.7 psi.
- The tires should be filled to:  
**31.9 + 6.7 psi = 38.6 psi**

### Example 3: Temperature Compensation – “Hot” Tires

- The vehicle has been driven to the shop on the highway for at least 60 minutes (vehicle has “hot” tires) and tire pressures are set to 31.9 psi.
- Workshop temperature is 68°F, and the expected lowest ambient temperature in the area is expected to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the tire pressure chart (Figure 1), find the intersection of the hot tire line at the point corresponding to 54°F, and read off the value on the tire pressure change axis. In this case it would be about 9.0 psi.
- The tires should be filled to:  
**31.9 + 9.0 psi = 40.9 psi**